


Master / Relay connections

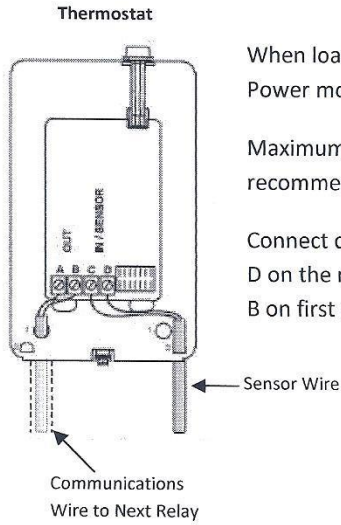

When loads of more than 15 amps are required, expansion is possible by using power modules. Power modules are connected to the live circuit and the load wires.

Maximum distance between thermostat and power modules is 80 ft. Use field wiring cable, recommended minimum 20 AWG - 2 conductors.

Connect communications wire to terminals A and B on the thermostat, then to terminals C and D on the relay. If more than one relay is used, connect communications wire to terminals A and B on first relay then to terminals C and D on second relay.

