



## ET-07 / ET-11-13GES

### INSTALLATION GUIDE - 11mm and 13mm GEL END SEAL


**NOTE:**

The end seal is designed to be installed only once; it cannot be removed from the heating cable once installed. Do not use until ready for final installation.

#### GEL END SEAL for HTR/MVP and HTLe/TLC


**STEP 1:**

- 1) Cleanly cut off the end of the cable.
- 2) Score down and around outer jacket 1 inch from the end.
- 3) Remove the outer jacket.
- 4) Do not cut or damage inner jacket.

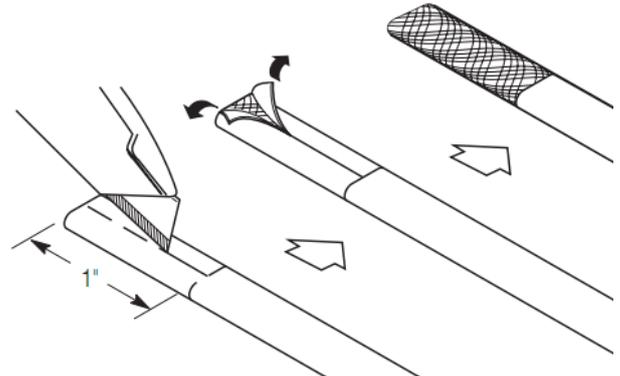


**STEP 2:**

Unravel and remove exposed braid.

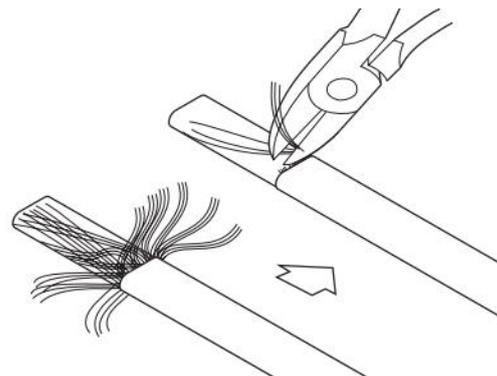

**STEP 3:**


- 1) Firmly push end seal onto the cable (at least 1 1/2 inches). Some gel may ooze out.
- 2) Do not twist or try to remove the end seal during or after insertion. Do not reuse an end seal.

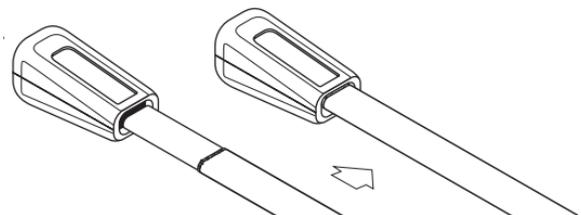

## **GEL END SEAL for HTR/MVP and HTLe/TLC**


### **STEP 1:**

Cleanly cut off the end of the cable.

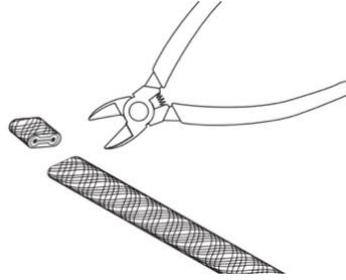


### **STEP 2:**

Push the braid back 2 inches from the cable end.

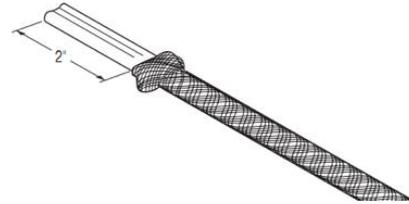

### **STEP 3:**

- 1) Firmly push end seal onto the cable (at least 1 1/2 inches). Some gel may ooze out.
- 2) Do not twist or try to remove the end seal during or after insertion. Do not reuse an end seal.

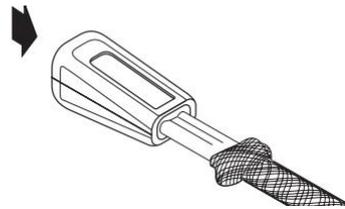

### **STEP 4:**

Slide the braid up against the end seal and secure with the 6-inch length of tape provided.

