



Assembly Guide


TIPS

To detach the parts from the board, press the anchor point with your thumb. Always push with your thumb on the engraved side of the board, so the piece falls under the board. You can easily locate the anchors points by looking at the back of the board. Use PVA glue diluted with a little water. (3 parts adhesive, 1 part of water). Use a small file to remove the anchor points' residues. You can also use a modeler's knife (handle it carefully to prevent injury). Use a small brush to spread the diluted glue.



Guide Townhouse A, B, C


This assembly guide is for houses A, B, C. However the steps for the skylights do not apply to Model B.

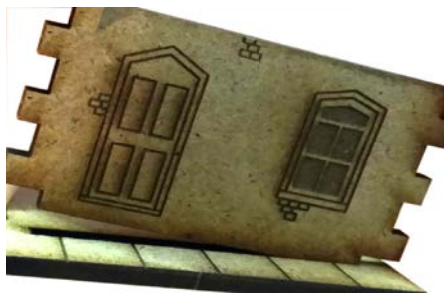

Insert part [8] into the provided slot on the sidewalk's side of part [1]




Add one of the four parts [5] to the right of part [8] and a second part [5] to the left of part [8]

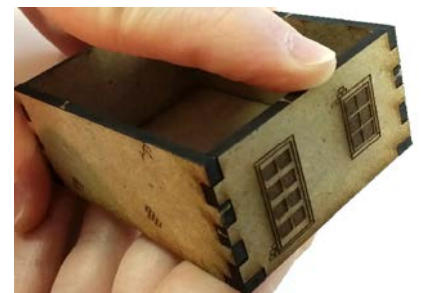


Add part [9] at the end of both parts [5] to close the first floor



Take parts [2] and [6]. Position part [6] at either end of part [2]

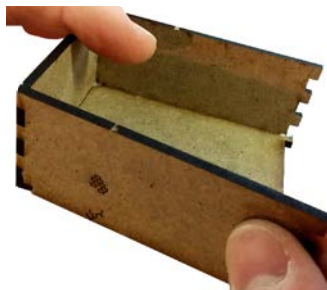

Add one part [5] to the right of part [6] and a second part [5] on the opposite side

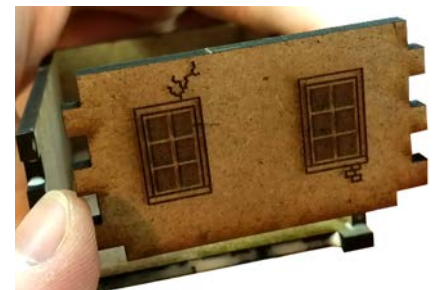

Add part [7] at the end of both parts [5] to close the second floor



Take parts [3] and [4], insert one into the other at a 90° angle




Position both parts [16] at each end of parts [3] and [4]. Carefully adjust the triangles so that they do not exceed the edges of parts [3] and [4]



Glue both parts [10] back to back

For the assembly of the skylights, push each piece carefully since parts are made to be very tight as to facilitate the assembling. Allow a drying time for the glue before continuing. It prevents glued parts from moving while assembling the rest.

Skylights

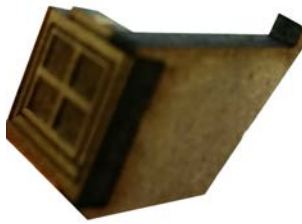

Take a part [14] and place one part [15] at each side to form the skylight



Placez une pièce [13] sur les deux pièces [15] pour former le toit de la lucarne, alignez-les bien avec les bords, pour pouvoir insérer la lucarne dans le toit. Répétez les deux dernières étapes pour la seconde lucarne



Collez les deux pièces [11] sur le dessus des deux pièces [10]



Under the second floor, place a part [12] at each corner of part [2]. Make sure no part [12] impinges on the walls



Before letting the parts [12] dry off, reposition the second floor over the first to make sure that the two stories fit together



Glue the remaining four parts [12] inside the roof. Make sure to leave some space (3 mm) for the front and rear walls of the house



Reposition the roof over the second floor as to make sure that the parts [12] fit well inside the second floor



Insert the two skylights into the roof's holes



Glue the chimney on the angled roof wherever you like



Shutters

Glue the shutters to each side of each window. Make sure to select the right shutter for the right window. If you own the **Model [A]**: the angled shutters go on the windows with the angled top and the shorter sides go against the window.

If you own the **Model [B]**: you only have rounded shutters and the shorter sides go against the window.

If you own the **Model [C]**: The shutters are only glued to windows of the second floor, there's no shutters on the double window.