



Assembly Guide

TIPS

- To detach the parts from the board, press the anchor point with your thumb.
- Always push with your thumb on the engraved side of the board, so the piece falls under the board.
- You can easily locate the anchors points by looking at the back of the board.
- Use PVA glue diluted with a little water. (3 parts adhesive, 1 part of water).
- Use a small file to remove the anchor points' residues. You can also use a modeler's knife (handle it carefully to prevent injury).
- Use a small brush to spread the diluted glue.



Note : If you attach several kits permanently, you do not need to use all feet.
 The guard-rails are always composed of a male side and a female side. The male side is always to the right of the opening of the walkway so that you can join each kit to your liking.

Guide Walkway, Corner




Insert parts [A and B] into each other. Make sure to position the base of the foot flat, in order to glue and level the two parts




For longer sections, take part [D] and glue one part [C] on each side as shown on the picture



Glue two feet (assembly of [A and B]) under each long section [D]. Assemble the second section likewise

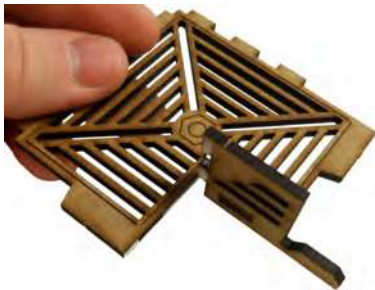


Insert part [K] on the single anchor point in the inner corner of part [J]

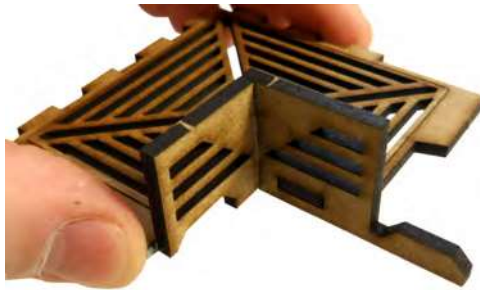

Insert part [N] into part [K]. Ideally, you should glue [N] to [K] and [J]



Make sure [N] forms a straight angle with [J]

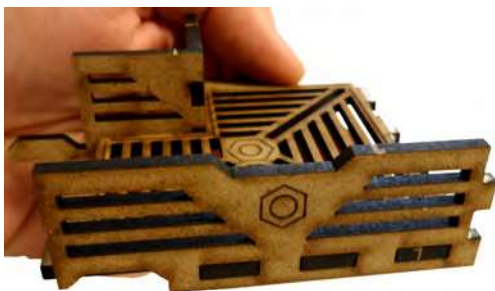

Glue [M] to the three anchors points on the outside of the corner (part J)



Glue [L] to the four anchors points on the right side of [M]



Finally, glue one foot under part [J]