

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

Anti-Roll-Kit # E40-51-022-01-01

2018+ Jeep Grand Cherokee Trackhawk

Kit Contents	Description	Part Number	Qty
	Rear Bar	AS41-51-022-01-RA	1
	Anti-Roll Hardware Kit	AK41-51-022-01-RA	1
	Bracket, Bushing	UB0521	2
	Bracket, Plate	UB0522	2
	Bushing, Rear	ES5272.01	2
	Zip Tie	H70065500	2
	Lubricant	AR.LUBRICANT	1
	Instructions	E40-51-022-01-01INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- **Installation time:** Is approximate 1/2 hour with the use of a hoist.
- **Never work on or under a vehicle unless it is properly supported.**
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.

FACTORY REAR BAR REMOVAL

1. Raise the vehicle up and make sure it is properly supported with safety stands. **Note: Never work under a vehicle that is not properly supported with the appropriate safety stands.**



Photo 1

2. Remove the rear underbody cover as shown. (See Photo 1)



Photo 2



Photo 3



Photo 4



Photo 5

3. Support the rear exhaust, then, disconnect the hanger grommets and lower the exhaust downward as shown. (See Photos 2, 3, 4 & 5)



Photo 6

4. Remove the nuts that secures the end links to both ends of the OE bar. (See Photo 6)

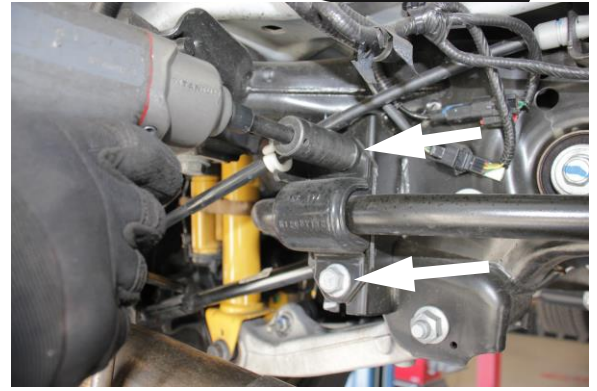


Photo 7



Photo 8

5. Remove the hardware that secures the OE bushing brackets, then, remove the bar from the vehicle. (See Photos 7 & 8)

EIBACH REAR BAR INSTALLATION



Photo 9

6. Secure the parking brake cable that was attached to the OE bushing brackets to the subframe using the provided zip ties as shown. (See Photo 9)



Photo 10



Photo 11

7. Install the Eibach rear bar and loosely secure the end links to the ends of the bar as shown. (See Photos 10 & 11)



Photo 12

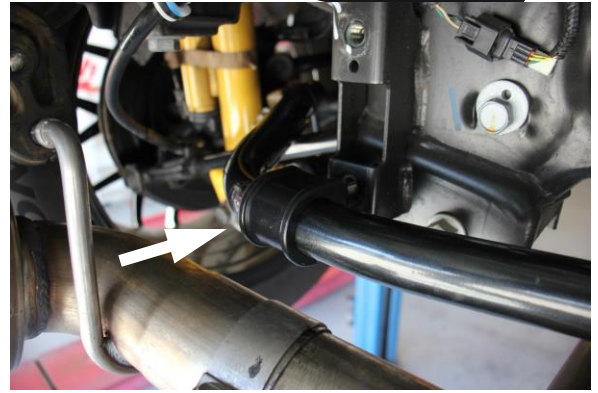


Photo 13

8. Apply the supplied lubricant to the Eibach bushings, then, install the bushings onto the Eibach Bar as shown. (See Photos 12 & 13)



Photo 14

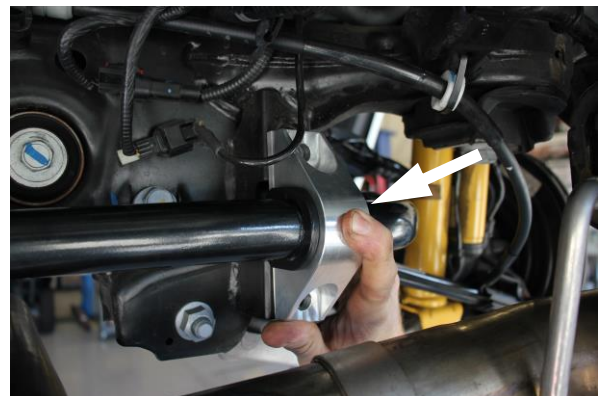


Photo 15



Photo 16

9. Install the provided flat bracket, and bushing bracket and secure them using the OE hardware as shown. (See Photos 14, 15 & 16)



Photo 17

10. You can now tighten the end links on both ends of the bar as shown. (See Photo 17)



Photo 18



Photo 19

11. Raise the exhaust upwards and secure it with the OE exhaust grommets. (See Photos 18 & 19)



12. Make sure everything is tightened and properly positioned, then, reinstall the underbody cover.
13. After road testing, double check all hardware to make sure everything is properly tightened and positioned.