

General notes

Pur Beton work to tolerances of +/- 1/8" on all dimensions. It is the responsibility of the client to verify that all dimensions and said tolerances are suitable for the purpose of the project.

Importante note:

Refer to product sheet

CuV 48B
 Br 19/20
 Cuv 48B_wm

Available on our web site:
www.purbeton.com

Wall mount Cuv 48B

Bracket Kit necessary:
 Br_19/20

To be used with sink model:
 Cuv: 48B

Included with Bracket kit
 2 Brackets 19" x 20" Left and Right
 8 lag screws 5/16" dia. x 2-1/2" long.
 4 x #10 1.1/4" long wood screws.

Cuv 48B_WM




178 Rang Duncan
 St-Chrysostome (Québec)
 Canada J0S 1R0
514 886-2444
info@purbeton.com
purbeton.com

Rituel

par Pur Béton

Cuv 48B


wall mount

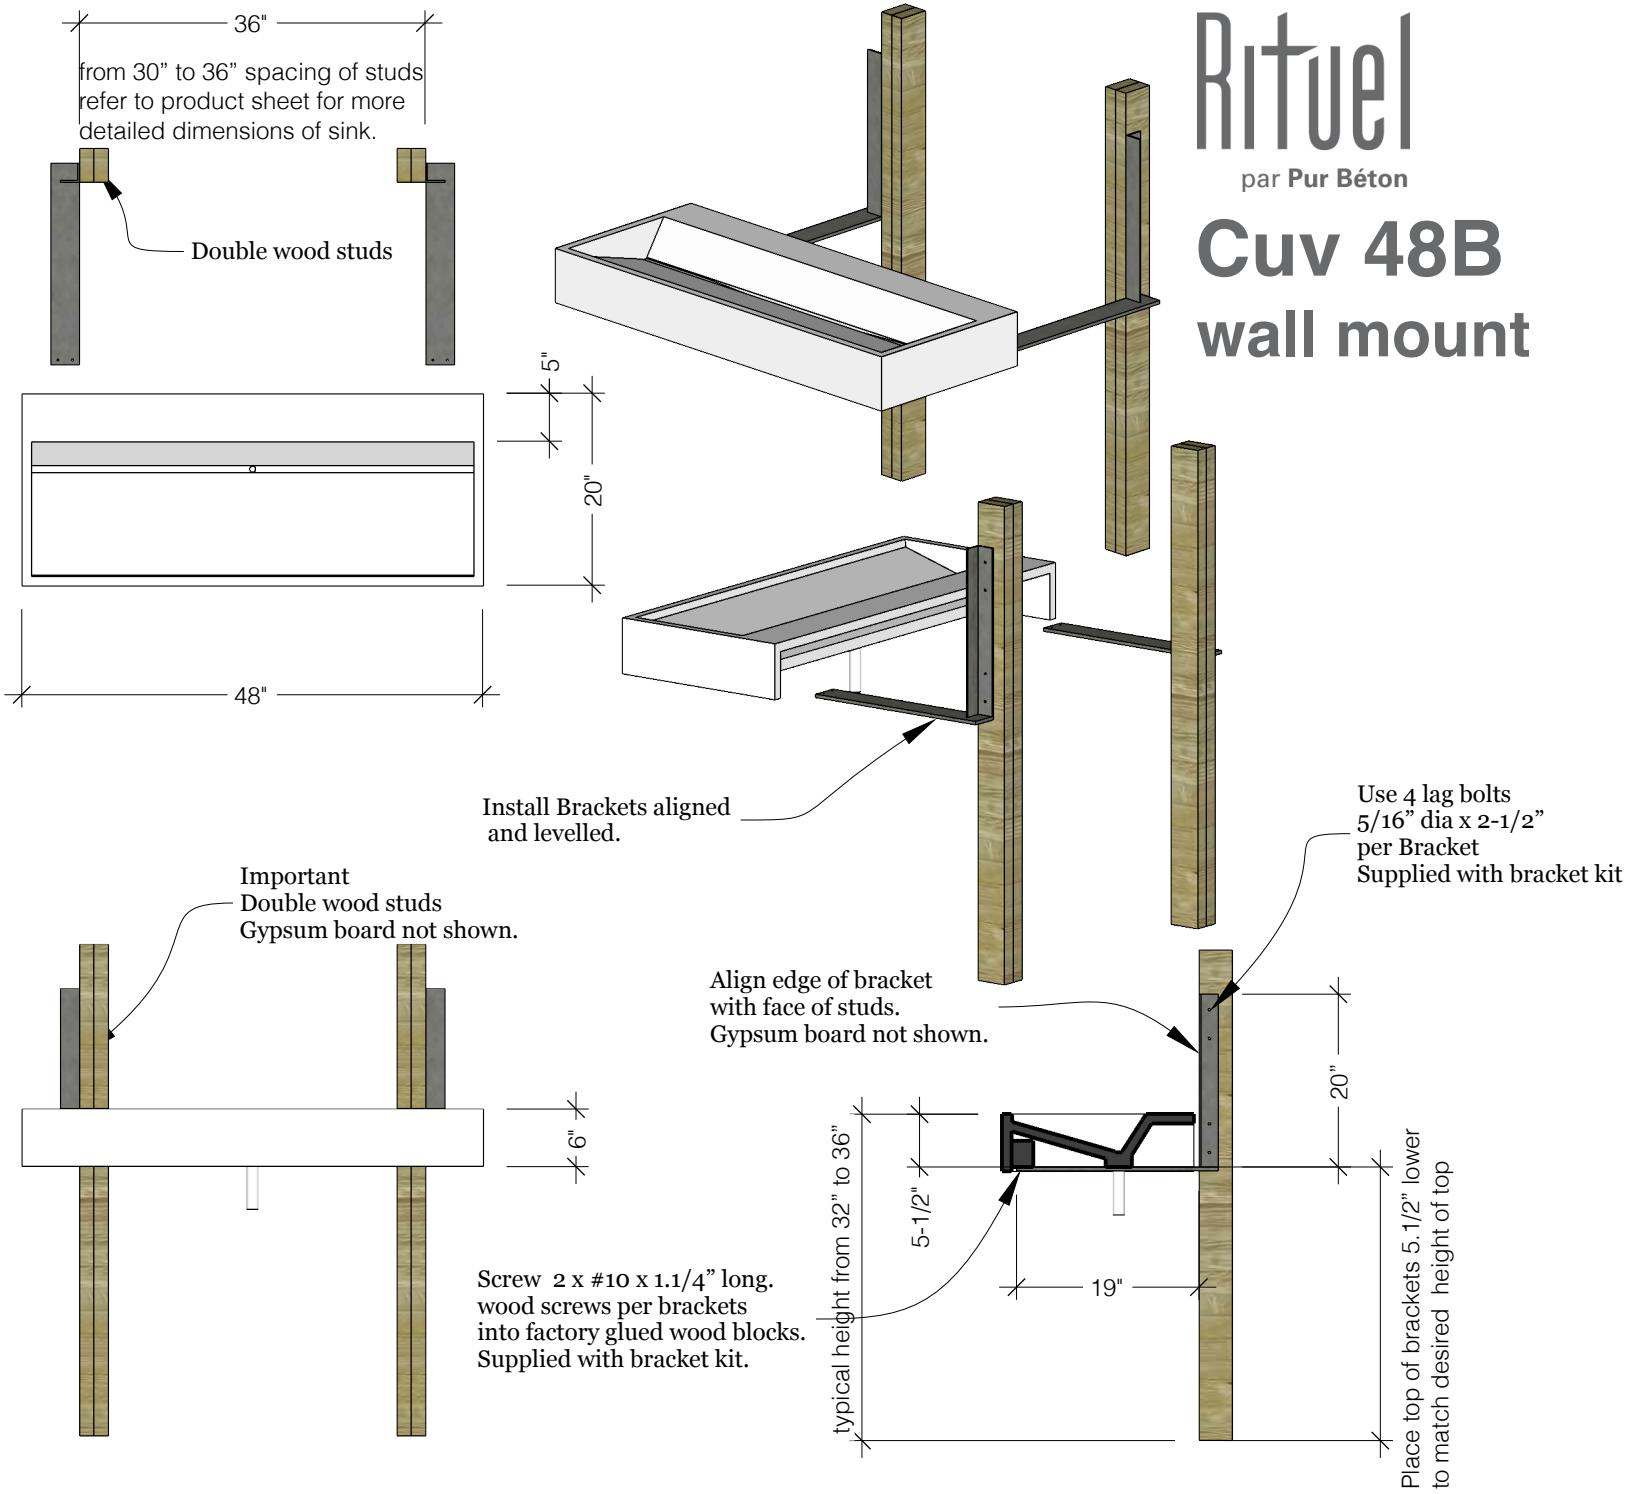

36"
 from 30" to 36" spacing of studs refer to product sheet for more detailed dimensions of sink.

Double wood studs

5"
 20"

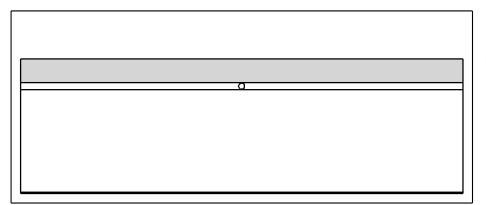

48"

Install Brackets aligned and levelled.

Use 4 lag bolts 5/16" dia x 2-1/2" per Bracket
 Supplied with bracket kit

Important
 Double wood studs
 Gypsum board not shown.

Align edge of bracket with face of studs.
 Gypsum board not shown.

Screw 2 x #10 x 1.1/4" long wood screws per brackets into factory glued wood blocks. Supplied with bracket kit.

typical height from 32" to 36"

Place top of brackets 5.1/2" lower to match desired height of top

