


Align edge of bracket with face of studs.
Gypsum board not shown.

Rituel

par Pur Béton

Cuv 84 wall mount

Use 4 lag bolts
1/4" dia x 2-1/2"
per Bracket
Supplied with bracket kit

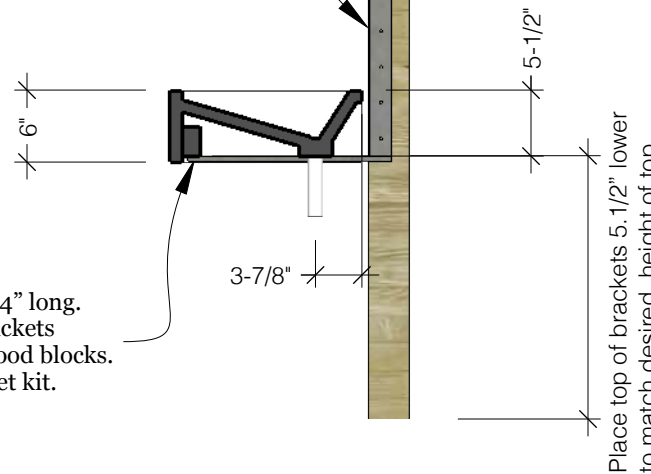

Screw 2 x #10 x 1.1/4" long.
wood screws per brackets
into factory glued wood blocks.
Supplied with bracket kit.

General notes
Pur Béton work to tolerances of +/- 1/8" on all dimensions. It is the responsibility of the client to verify that all dimensions and said tolerances are suitable for the purpose of the project.

Importante note:
product sheet
Cuv 84
Br 15/20
Cuv 84_wm
Available on our web site:
www.purbeton.com

Wall mount Cuv 84
Bracket Kit necessary: 2 x Br_15/20
To be used with sink model: Cuv: 84
Included with Bracket kit
4 Brackets 15" x 20" Left and Right
16 lag screws 1/4" dia. x 2-1/2" long.
8 x #10 1.1/4" long wood screws.

Cuv 84_WM



178 Rang Duncan
St-Chrysostome (Québec)
Canada J0S 1R0
514 886-2444
info@purbeton.com
purbeton.com