

Feuille d'instructions

Quincaillerie fournie


1 Cheville en plastique

2 Vis


Pièce de tête de lit

3 Support mural

4 Panneau de tête de lit

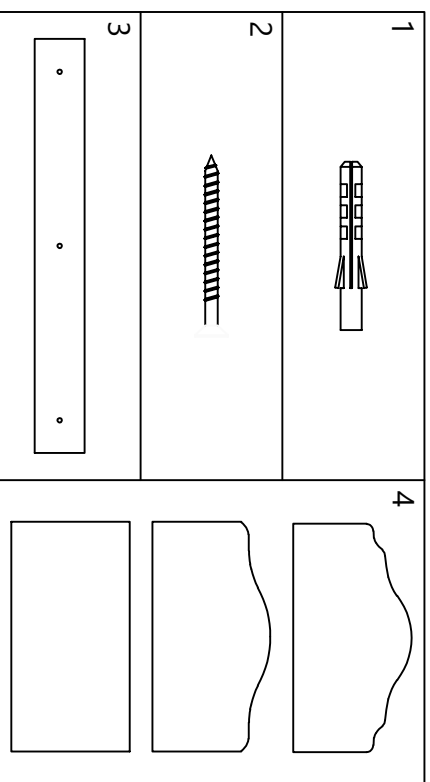

Outils requis

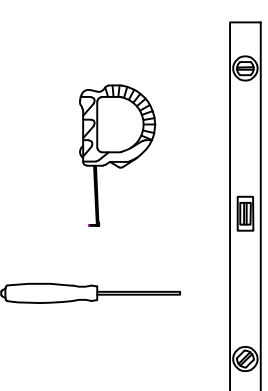


Installation

Étape 1 Mesurez la distance entre le bas du support mural et le haut de votre matelas. Idéalement, la base de la tête de lit doit être à la même hauteur que le dessus du matelas.

Étape 2 À l'aide d'un niveau, maintenez le support mural contre le mur et marquez l'emplacement des vis avec un crayon.

Étape 3 Vissez le support mural avec la quincaillerie fournie.

Étape 4 Accrochez la tête de lit en vous assurant d'aligner le support mural avec le support de tête de lit.

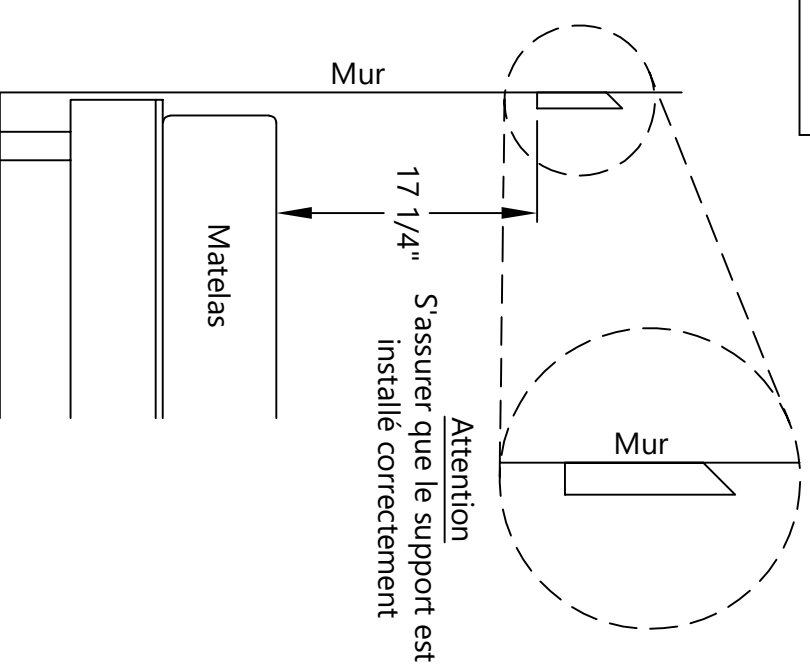


Instructions sheet

Hardware provided


- 1 Plastic Anchors
- 2 Screws

Headboard parts

- 3 Wall bracket
- 4 Headboard panel

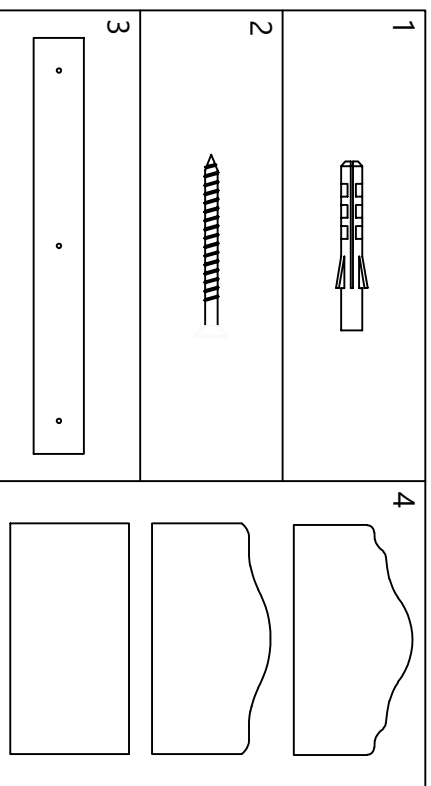

Tools needed

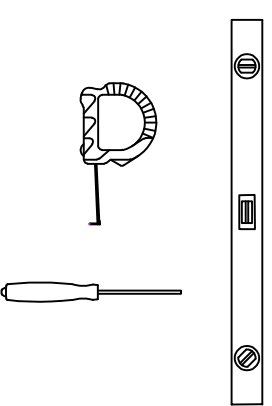

Installation

- Step 1 Measure the distance from the bottom of the wall support to the top of your mattress. Ideally, the base of the headboard should be at the same height as the top of the mattress.
- Step 2 Using a level, hold the wall bracket against the wall and mark the location of the screws holes with a pencil.
- Step 3 Screw the wall bracket with the supplied hardware.
- Step 4 Hang the headboard, making sure to align the wall bracket with the headboard bracket.

